 




*Invented for the way you clean™*

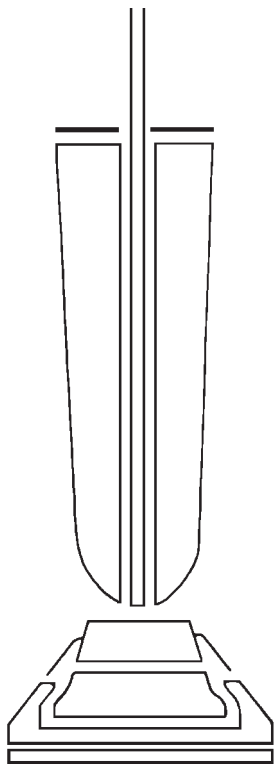

# **Upright Vacuum Cleaner**

Household Type

## **Owner's Guide**

### **1400-1900 Series**

#### **Index**

|                            |    |
|----------------------------|----|
| Important Safeguards ..... | 2  |
| Service Information.....   | 4  |
| Assemble.....              | 5  |
| Use .....                  | 7  |
| Brush Roll Belt.....       | 9  |
| Brush Roll .....           | 10 |
| Headlight .....            | 10 |
| Warranty .....             | 11 |
| Order Form .....           | 13 |

**For location of nearest Eureka  
Warranty Station or service  
information call  
1-800-282-2886\*.**

**[www.eureka.com](http://www.eureka.com)**

# IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following:

**READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER.**

## WARNING

To reduce the risk of fire, electric shock or injury

- Do not use outdoors or on wet surfaces.
- **Do not leave vacuum cleaner when plugged in. Turn off the switch and unplug the electrical cord when not in use and before servicing.**
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If vacuum cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center before using.
- Do not pull or carry by cord. Do not use cord as a handle. Do not close door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- Turn off all controls before unplugging.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- This vacuum cleaner creates suction and contains a revolving brush roll. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not place vacuum cleaner on furniture or stairs as the brush roll may cause damage. Place vacuum cleaner on floor with handle in storage position while using attachments.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust bag in place.
- Belt pulleys can become hot during normal use. To prevent burns, avoid touching the belt pulley when servicing the drive belt.
- Do not use to pick up flammable or combustible liquids such as gasoline, or use in areas where they may be present.
- Store your cleaner indoors in a cool, dry area.
- Keep your work area well lighted.
- Unplug electrical appliances before vacuuming them.
- **WARNING:** This product contains chemicals known to the State of California to cause cancer, birth defects or reproductive harm. *WASH HANDS AFTER HANDLING*

## SAVE THESE INSTRUCTIONS

# CONSEILS DE SÉCURITÉ

Lors de l'utilisation d'un appareil électrique, quelques précautions élémentaires doivent être observées, incluant les suivantes:

**LISEZ TOUTES LES INSTRUCTIONS AVANT D'UTILISER VOTRE ASPIRATEUR.**

## AVERTISSEMENT

Pour réduire le risque de feu, de choc électrique, ou de blessure:

- Ne pas utiliser à l'extérieur ou sur des surfaces mouillées.
- **Fermez le commutateur et débranchez l'appareil lorsque vous ne l'utilisez pas ou avant le nettoyage ou l'entretien.**
- Ne permettez pas qu'il soit utilisé comme jouet. Une attention particulière est nécessaire lorsque utilisé par ou près d'un enfant.
- Suivez les recommandations d'utilisation de ce manuel. Utilisez uniquement les accessoires recommandés par le fabricant.
- Ne pas utiliser si le cordon ou la fiche sont endommagés. Si l'aspirateur ne fonctionne pas comme il le devrait, s'il a été échappé, s'il est endommagé, s'il a été laissé à l'extérieur ou échappé dans l'eau, retournez-le à un centre de service avant de utiliser.
- Ne pas le tirer ou le transporter par le cordon, ne pas utiliser le cordon en guise de poignée. Ne pas fermer une porte sur le cordon ou tirer le cordon sur des coins ou bordures pointus. Ne pas circuler sur le cordon avec l'aspirateur. Tenir le cordon à distance des surfaces chauffantes.
- Ne pas utiliser des rallonges ou des prises qui n'ont pas de capacité suffisante pour transporter le courant.
- Fermer tous les contrôles avant débrancher.
- Ne pas débrancher en tirant sur le cordon. Pour débrancher, tenez la fiche et non le cordon.
- Ne pas manipuler la fiche ou l'aspirateur avec les mains mouillées
- Ne pas rien insérer dans les ouvertures. Ne pas utiliser si des ouvertures sont bloquées; assurez-vous qu'elles soient dégagées de poussière, mousse, cheveux ou toute autre chose qui pourrait réduire le passage de l'air.
- Cet aspirateur crée de la succion et contient un rouleau-brosse tournant. Tenir les parties mobiles et les ouvertures loin des cheveux, du linge, des doigts et de toute partie du corps.
- No coloque la aspiradora en los muebles o las escaleras porque el cepillo puede causar daños. Coloque la aspiradora en el piso con el mango en posición de almacenamiento durante el uso de archivos adjuntos.
- Ne pas ramasser des objets qui brûlent ou fument comme les cigarettes, allumettes ou cendres chaudes.
- N'utilisez pas sans le sac de poussière en place.
- Les poulies du courroie peuvent devenir chaudes pendant l'utilisation normale. Pour prévenir des brûlures, évitez de touché la poulie du courroie lorsque vous réparez la courroie.
- Ne pas utiliser pour ramasser des liquides inflammables ou combustibles comme de l'essence: Ne pas utiliser dans les endroits où ces liquides pourraient être présents.
- Entrezposez votre aspirateur à l'intérieur dans un endroit propre et sec.
- Maintenez un bon éclairage à l'endroit où vous travaillez.
- c Débrancher les appareils électrique avant de les balayer
- **AVERTISSEMENT:** Ce produit contient des produits chimiques reconnus par l'État de Californie pour causer le cancer, des malformations congénitales ou des malformations congénitales. Laver les mains après manipulation.

# CONSERVEZ CES INSTRUCTIONS

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

Afin de réduire le risque de choc électrique, cet appareil est muni d'une fiche polarisée (une des lames est plus large). Cette fiche ne peut être insérée dans une prise polarisée que d'une seule façon. Si la fiche ne peut être insérée dans la prise, retourner la fiche. Si la fiche ne peut toujours pas être insérée dans la prise, faire installer une prise adéquate par un électricien qualifié. Ne pas modifier la fic

## GENERAL INFORMATION

The cleaner is designed to pick up dirt and dust particles. Avoid picking up hard or sharp objects with the cleaner to prevent bag tears, hose clogs, and fan blade breakage with subsequent motor damage.

## Service Information

The instructions in this booklet serve as a guide to routine maintenance. For additional service information telephone our toll free number for the nearest Eureka Authorized Warranty Station. You should know the model, type and serial numbers when you call:

**1-800-282-2886**

If you prefer, you can write to Electrolux Home Care Products, North American Service Division, P.O. Box 3900, Peoria, IL 61612. In Canada write to Electrolux Home Care Products North American Service Division 5855 Terry Fox Way, Mississauga, Ontario L5V3E4. Refer to The Eureka Limited Warranty for complete service information.



**DO NOT OIL the motor or the brush roll at any time. The bearings are permanently lubricated and sealed.**

## Rating Plate

The model, type, and serial numbers are indicated on the rating plate located on the underneath side of the cleaner. For prompt and complete service information, always refer to these numbers when inquiring about service.

|   |       |            |
|---|-------|------------|
| MODEL                                       | TYPE  | SERIAL NO. |
| VOLTS                                       | AMPS. | HERTZ      |
| SERVICE INFORMATION: 1-800-282-2886         |       |            |
| ELECTROLUX HOME CARE PRODUCTS NORTH AMERICA |       |            |
| <b>eureka!</b>                              |       |            |
| BLOOMINGTON, ILLINOIS 61701                 |       |            |

**Model & Type** \_\_\_\_\_

**Serial No.** \_\_\_\_\_

**Registration:** To register your product visit **www.eureka.com** and click on the 'Register Your Product' link in the top right corner.

 
# HOW TO ASSEMBLE

CAUTION: Completely assemble vacuum cleaner before using.

Handle styles may vary. One handle has four snap pins on the back side of the handle, the other handle has two snap pins on each side. The cord hooks may be different.


## Step 1 - Handle Connector

Push connector A into the upper handle and align holes. One connector, shown, is flat on one side and the 4 pins snap into one side. The connector in Detail A has 2 snap pins on each side and alignment tabs that slide into the handle.

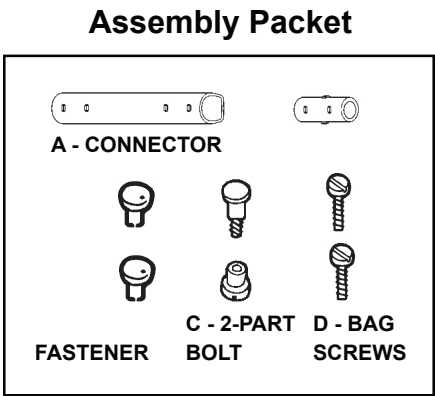


## Step 2 - Fastener

 Push fastener B into a hole and apply thumb pressure so fastener snaps into position. Secure second fastener. Repeat steps 1 and 2 to complete the assembly of the handle. See Detail B.

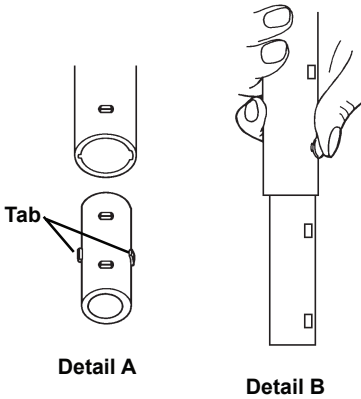

## Step 3 - Handle Socket

 Push handle into handle socket E so handle grip curves away from the cleaner. Align the holes, insert the 2- part bolt C and tighten.

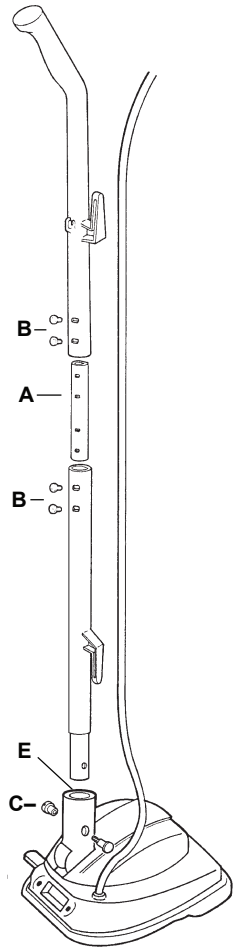


## Step 4 - Outer Bag

Hold outer bag with zipper away from handle. **Important: To provide a good gasket seal, the bag coupling must seat firmly against the motor base and not overlap the furniture guard.** Start the bag screws D by hand, then tighten with a screwdriver.

## Step 5 - Bag Support

 Loop the spring F onto the bag support G, located to the back of the upper cord hook.

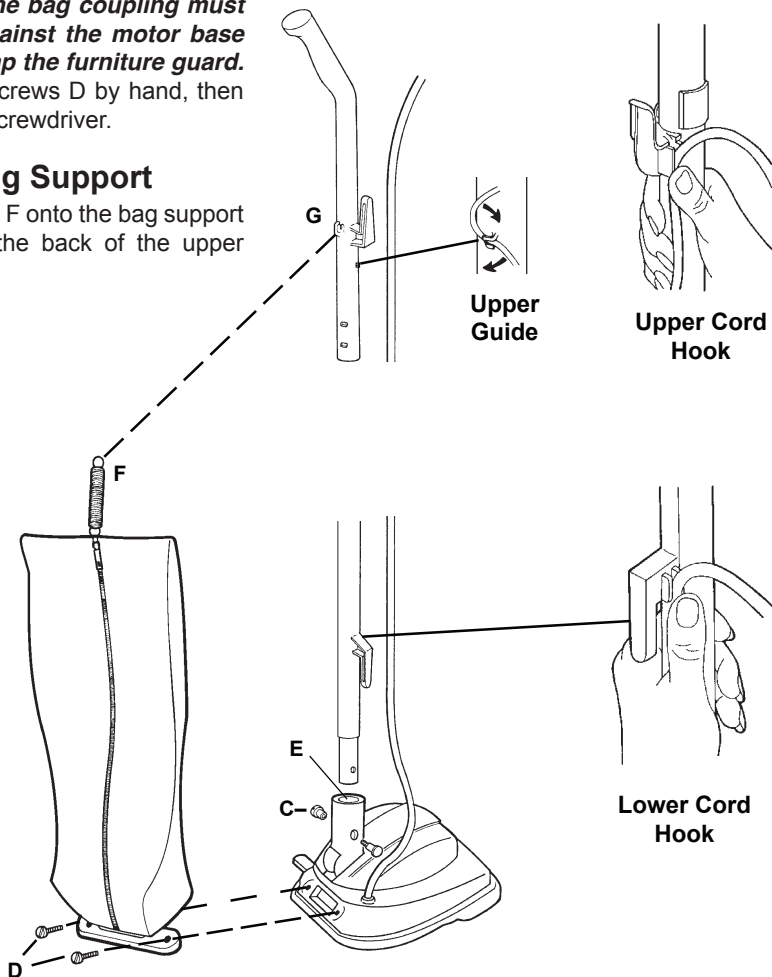

## Step 6 - Cord Storage

Secure the cord in the guide below the upper cord hook as shown or secure the cord into the side of the upper cord hook.

 
Secure cord into lower cord hook. Pull up on cord to tighten but leave slack near the base so the cord does not strain when the handle is lowered for use. Wrap the cord around the cord hooks. Fasten the plug to the cord to prevent unwinding.

## HOW TO USE

The upright vacuum cleaner is designed to be used on multiple types of carpeting. Do not attempt to use the upright vacuum cleaner on bare floors, as damage to the floor covering may result. Above the floor cleaning tools are available (optional)


### Handle Adjustment

With the tip of the foot, press down to release the handle lock located at the left rear side of the cleaner. Move the handle and adjust it to the desired position for (1) storing upright, (2) operating the cleaner at a comfortable height for the user, and (3) cleaning underneath low furniture.

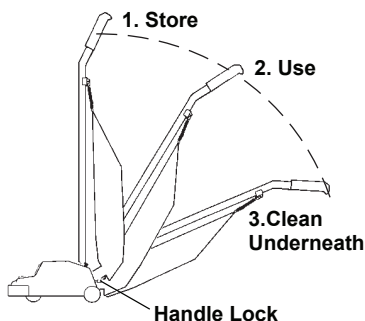


### Power Switch

 The power switch is mounted on the motor hood. A push with the foot turns the motor ON; push again to turn the motor OFF.

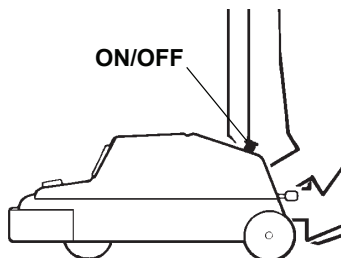

### Cord Storage

 The cleaner has two convenient cord storage hooks attached to the handle. However, some models feature a quick release cord hook on the upper handle. A downward twist of the cord hook frees the cord for quick removal. With either style, wind the cord around the hooks for storage. Fasten the plug to the cord to prevent unwinding.

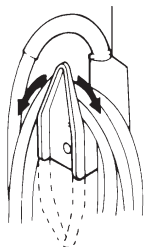

### Cleaner Height Setting

**WARNING: Avoid injury. Keep loose clothing, hair, fingers, and all other parts of body away from any moving part (such as the revolving brush). Turn off the switch and unplug the cleaner before changing the cleaner height setting.**

The front of the cleaner has an adjustment that raises or lowers the cleaner base to match the type of carpet. With the cleaner cord unplugged, set the adjustment to lowest setting for maximum cleaning. If the cleaner is difficult to push, move adjustment to next highest setting until cleaner is comfortable to push. The brush roll must reach the carpet for effective cleaning.

**Make each adjustment with cleaner switch off and cord disconnected from outlet.** For ease in moving the adjustment knob, place handle in operating position and tilt cleaner back to remove weight from front wheels.

## HOW TO MAINTAIN

 
The instructions given in this booklet serve as a guide to routine maintenance. To avoid unnecessary service calls, check the bag, belt and brush roll often.

### Disposable Dust Bags

Paper bags play a very important role in the efficiency of a vacuum cleaner. The purpose of a paper bag is to trap dirt. But at the same time the bag must be porous enough to allow air to pass through. If the paper bag becomes clogged, no air can pass through the cleaner and no cleaning can take place, regardless of how powerful the unit is. Change the dust bag frequently. Some fine particles can restrict airflow very quickly and will decrease performance even before the bag appears to be full. For that reason, when vacuuming carpet fresheners or cleaners, powder, plaster dust, or similar fine substances, the bag may need to be changed more often.

### How To Change Disposable Dust Bag–Style F & G

**Note:** Turn off the switch and unplug the electrical cord before changing dust bag. Never operate the vacuum cleaner without the dust bag.

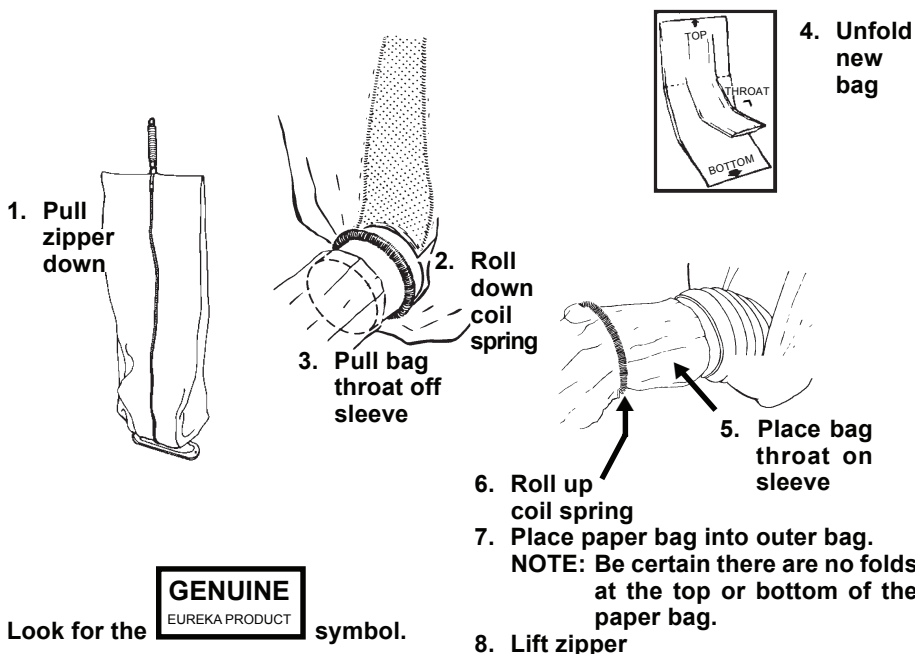- 
1. Pull zipper down
  2. Roll down coil spring
  3. Pull bag throat off sleeve
  4. Unfold new bag
  5. Place bag throat on sleeve
  6. Roll up coil spring
  7. Place paper bag into outer bag.  
**NOTE:** Be certain there are no folds at the top or bottom of the paper bag.
  8. Lift zipper
- Look for the **GENUINE EUREKA PRODUCT** symbol.

Ask for **GENUINE EUREKA** dust bags–Style F & G.

### Cleaner Care

**NOTE:** Turn off the switch and unplug the electrical cord before cleaning unit.

To keep the vacuum cleaner looking new, it can be wiped with a damp cloth and a mild soap solution, then thoroughly dried. Never use any type of chemical as chemicals can damage the cleaner. When not in use, the cleaner should be stored in a clean, dry place.



 
## Brush Roll Belt

The brush roll belt on the upright vacuum cleaner drives the brush to agitate, sweep, and comb the carpet nap. The belt should be checked regularly to be sure it is in good condition. Replace the belt if it is stretching, cracking, or slipping. Cut away any hair or thread wound around the brush roll or the belt pulley because the buildup could cause the belt to rotate unevenly.


## How To Replace A Worn Belt

**NOTE:** Turn off the switch and unplug the electrical cord before replacing belt. Belt pulleys can become hot during normal use. To prevent injury, avoid touching the belt pulley when servicing the drive belt.

**IMPORTANT:** Improper installation of the brush roll or brush roll belt could cause carpet or cleaner damage.

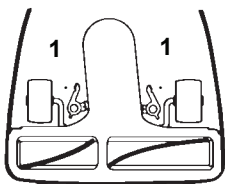


 1. Release cam locks.

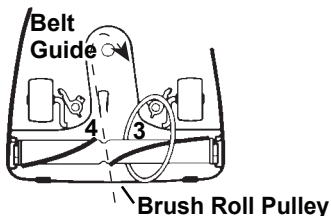


Check for brush wear, see *Brush Roll* instructions.

 
3. Place new belt around brush roll.
4. Align brush roll pulley with belt guide.

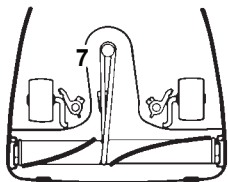

 7. Place lower side of belt into belt guide and pull to stretch the belt around the left side of the motor pulley. Rotate pulley to secure belt into groove.

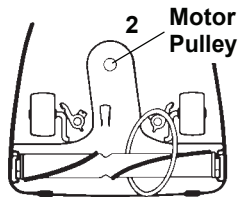


 2. Pull up on belt to rotate it off the motor pulley. Lift up on brush roll and remove worn belt.

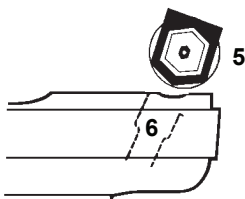

5. Place rubber end cap covers over both end caps (flat side against end cap). Align holes and secure. Then, slant brush roll forward so end caps are in line with slots in cleaner base.

 6. Push brush roll into base

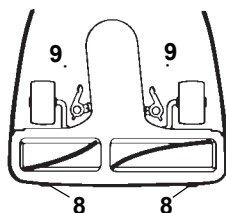

8. Place slots of bottom plate over tabs of cleaner base.
9. Seat and secure cam locks

Ask for **GENUINE EUREKA** replacement belts No. 52100.



Look for the  symbol.

## Brush Roll

The rotating brush roll sweeps and combs the carpet nap. Keep the brush roll free from hair and threads so it will continue brushing. When the bristles of the brush roll no longer touch a straight edge held against the bottom plate, the brush roll is ineffective because the bristles no longer touch the carpet nap. To maintain the most effective cleaning, the brush roll should be replaced.

## Headlight Bulb (Standard on most models)

**NOTE:** Turn off the switch and unplug the electrical cord before replacing headlight bulb.

 
 
Headlight style varies by model. Locate the notches that release the tabs at either (1) top, (2) side, or (3) bottom of the lens, as illustrated. Place a screwdriver into one notch; twist or pry the screwdriver to release the lens. Repeat for the second notch on the opposite side.

Rotate the bulb socket forward. Push bulb in and turn to remove. Secure new bulb into socket and rotate bulb socket backward.

Replace the lens tabs into the top or the bottom of the hood opening. Rotate lens to position and press down at notch until the lens locks into position.

**NOTE:** Use 25 watt replacement bulb, only.

Ask for **GENUINE EUREKA** replacement bulb, 40009A.

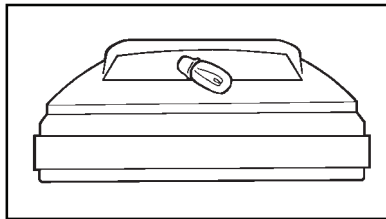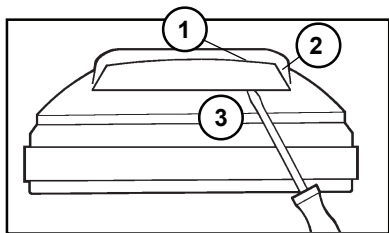

# The Eureka Limited Warranty

Eureka warrants this vacuum cleaner to be free from defects in material and workmanship for a term of one year for normal household use. Warranty is granted only to the original purchaser and members of immediate household. The warranty is good for one year from the date of purchase only when the vacuum cleaner is used in the accordance with Eureka operating instructions.

**Note:** refurbished or remanufactured products have a one year limited warranty.

The warranty does not cover:

- Parts of the vacuum that require replacement under normal use such as disposable dust bags, filters, drive belts, light bulbs, brush roll, bristles, impellers and cleaning.
- Damages or malfunctions caused by negligence, abuse, and use not in accordance with the Owner's Guide.
- Defects or damages caused by unauthorized service or the use of other than Genuine Eureka, ARM & HAMMER™ and Filtrete™ by 3M parts.

## What Eureka will do

Eureka will, at its option, repair or replace a defective vacuum or vacuum part that is covered by this warranty. As a matter of warranty policy, Eureka will not refund the consumer's purchase price.

## Obtaining warranty service

To obtain warranty service you must return the vacuum or vacuum part along with "proof of purchase" to any Eureka Authorized Warranty Station. For Eureka Authorized Warranty Station or Service Information, visit [www.eureka.com](http://www.eureka.com), write or telephone toll free:

USA: 1-800-282-2886  
Electrolux Home Care  
North America Service  
Division P.O. Box 3900  
Peoria, IL 61612

Canada: 1-800-282-2886  
Electrolux Home Care  
North America Service Division  
5855 Terry Fox Way Mississauga,  
Ontario L5V 3E4

## Obtaining warranty service outside your community

You must pay the shipping charges to the Eureka Authorized Warranty Station.

## Return shipping charges

Charges will be paid by the Warranty Station. When returning parts for repair, please include the model, type and serial number located on the rating plate on the lower backside of the vacuum.

## Further limitations and exclusions

Any warranty that may be implied in connection with your purchase or use of the vacuum, including any warranty of Merchantability or any warranty for Fitness For A Particular Purpose is limited to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

Your relief for the breach of this warranty is limited to the relief expressly provided above. In no event shall the manufacturer be liable for any consequential or incidental damages you may incur in connection with your purchase or use of the vacuum.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights. You may also have other rights, which may vary by state.

The ARM & HAMMER name is a trademark of Church and Dwight Co., Inc. 3M and Filtrete are trademarks of 3M Company, used by Electrolux Home Care Products, Inc. under license.

## *Further Limitations and Exclusions*

Any warranty that may be implied in connection with your purchase or use of the cleaner, including any warranty of Merchantability or any warranty for Fitness For A Particular Purpose is limited to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

Your relief for the breach of this warranty is limited to the relief expressly provided above. In no event shall Eureka be liable for any consequential or incidental damages you may incur in connection with your purchase or use of the cleaner. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights. You may also have other rights which vary by state.



## *Questions & Answers about Genuine Eureka Products*

**Q:** Why should I use only Genuine Eureka paper bags, belts, and parts in my Eureka vacuum cleaner?

**A:** Typically, packaged products and paper bags can be identified by a "Genuine Eureka Product" symbol (see illustration above). For further identification assistance, ensures the long life and cleaning efficiency of your vacuum cleaner. Overall, this saves you money and helps to keep your home clean.

**Q:** How can I be sure I am using only genuine Eureka products in my vacuum cleaner?

**A:** Typically, packaged products and paper bags can be identified by a "Genuine Eureka Product" symbol (see illustration above). For further identification assistance, you may call our toll-free number, 1-800-282-2886, for the location of a nearby Eureka Authorized Warranty Station.

**Q:** Are there any differences between "made to fit" or "imitation" and Genuine Eureka paper bags, belts, and parts?

**A:** Yes, there are some very important differences in materials, quality, and reliability. Many customers have mistakenly purchased "imitation" paper bags and parts while thinking they purchased genuine. Unfortunately, many of these customers discovered the differences after they experienced related difficulties.

**For Genuine Eureka Value, Accept No Imitations!**

**eureka!**  
Invented for the way you clean.

Household Warranty  
abs 190



For orders in US  
Para pedidos en los EE.UU.

## PARTS ORDER FORM FORMULARIO DE PEDIDO DE PIEZAS



[www.EUREKA.com](http://www.EUREKA.com)

 
 



For faster service, visit us Online  
Para obtener un servicio más rápido,  
haga los pedidos por Internet



By Phone: **1-800-282-2886**  
Por Teléfono:

**HOURS:** Cal Monday-Friday, 8 am-7:30 pm CST; Saturday and Sunday, 10 am-6:30 pm CST (Please call the same number for answers to problems or questions in the USA and Canada)  
**HOPAROS:** Lunes de lunes a viernes de 8 am a 7:30 pm CST y sábados y domingos de 10 am a 6:30 pm CST (Llama a este mismo número para consultas o preguntas en EE.UU. y Canadá)

Genuine Eureka Accessories, Bags, Belts and Filters  
Accessoires, sacs, courroies et filtres Electrolux authentiques

|  |  | Part No.<br>N° de parte | Qty.<br>Cant. | Price (usd)*<br>Precio (usd)* | Total<br>Total |
|---|--|-------------------------|---------------|-------------------------------|----------------|
|  | F&G BAG (3 per pack)<br>BOLSA F&G (3 por paquete)                            | 52320B                  |               | \$2.99                        |                |
|   | PREMIUM F&G BAG (3 per pack)<br>BOLSA F&G DE PRIMERA CALIDAD (3 por paquete) | 57695B                  |               | \$5.99                        |                |
|   | OUTER BAG<br>BOLSA EXTERNA   | 53977-33                |               | \$21.99                       |                |
|  | BELT STYLE RD (package of 2)<br>CORREA RD (2 por Paquette)                   | 52100C                  |               | \$2.99                        |                |
|  | EXTENSION WAND<br>TUBO VARILLA DE EXTENSIÓN                                  | 14070-3                 |               | \$4.99                        |                |
|  | DUSTING BRUSH<br>CEPILLO PARA POLVO  | 54505-3                 |               | \$5.99                        |                |

1 of / de 2

Genuine Eureka Accessories, Bags, Belts and Filters  
Accessoires, sacs, courroies et filtres Electrolux authentiques

Part No.  
N° de pièce

Qty.  
Qté.

Price (CAD)\*  
Prix (CAD)\*

Total



UPHOLSTERY NOZZLE  
BROSSE POUR MEUBLES REMBOURRÉS

53454-7

\*

see p. 1  
voir p. 1



CREVICE TOOL  
OUTIL DE COIN

27237-3

\*

see p. 1  
voir p. 1



FLOOR BRUSH  
BROSSE POUR PLANCHERS

54309-7

\*

see p. 1  
voir p. 1



TOOL SET, HOSE ASSY. & 4 TOOLS  
ENSEMBLE BOYAU ET OUTILS DE 4

60F

\*

see p. 1  
voir p. 1



BRUSHROLL  
ROULEAU-BROSSEUR

54104-1

\*

see p. 1  
voir p. 1



END CAP COVER  
LE COUVERCLE À EXTRÉMITÉ

26059A

\*

see p. 1  
voir p. 1



ATTACHMENT CLIP  
PORTE-OUTILS

54610

\*

see p. 1  
voir p. 1

TOTAL: \*prices subject to change without notice  
TOTAL: \*prix sujets à des modifications sans avertissement

TAX: (add state tax and local taxes as required by law)  
TAXE: (ajouter les taxes de l'état et les taxes locales comme cela est exigé par la loi)

POSTAGE AND HANDLING CHARGE / FRAIS DE MANUTENTION ET D'ENVOIS

TOTAL ENCLOSED (A + B + C = D) / TOTAL CH-JOINT (A + B + C = D)

④

③

②

①

**eureka!**  
For orders in Canada  
Pour les commandes  
au Canada

**IMPORTANT / IMPORTANT**

MODEL NUMBER  
NUMÉRO DE MODÈLE  
SERIAL NUMBER  
NUMÉRO DE SÉRIE

Be sure to include your model, type and serial numbers.  
These numbers may be found on the rating plate.  
Veuillez à joindre vos numéros de modèle, type et série.  
Ces numéros figurent sur la plaque du constructeur.

**By Mail: / Par Courier:**

Simply fill out this Order Form. Please be sure to include your phone number.  
Remplissez simplement ce bon de commande.  
Veuillez à joindre votre numéro de téléphone

**SHIP TO: / EXPÉDIEZ À:**

Name / Nom

Address / Adresse

City / Ville

State / État

Zip Code / Code Postal

Telephone (Very Important) / Téléphone (Très Important)

**PAYMENT: / PAIEMENT:**

(no C.O.D. checks) (pass de livraison contre remboursement)  
[no check or money order, DO not send currency,  
Chèque ou mandat, N'envoyez pas d'espèces.]

☐ VISA ☐ DC ☐ MC ☐ AMEX

ACCT. NUMBER / NUMÉRO DE COMPTE

EXPIRATION DATE

DATE D'EXPIRATION

SIGNATURE (full name as shown on acct.)

**PAYABLE TO: / À L'ORDRE DE:**

Electrolux Home Care Products Canada  
5855 Terry Fox Way  
Mississauga, Ontario L5V 3E4

56251B (6/70) Printed in U.S.A.  
© 2010 Electrolux Home Care Products, Inc. Imprimé aux E.-U.



For orders in US  
Para pedidos en los EE.UU.

## PARTS ORDER FORM FORMULARIO DE PEDIDO DE PIEZAS



[www.EUREKA.com](http://www.EUREKA.com)

For faster service, visit us Online  
Para obtener un servicio más rápido,  
haga los pedidos por Internet

 







By Phone: 1-800-282-2886  
Por Teléfono:

HOURS: Sat Monday-Friday, 8 am-7:30 pm CST; Saturday and Sunday, 10 am-6:30 pm CST (Please call the same number for answers to problems or questions in the USA and Canada)

HORARIOS: Lunes a viernes de 8 am a 7:30 pm CST y sábados y domingos de 10 am a 6:30 pm CST (Llama a este mismo número para consultas o preguntas en EE.UU. y Canadá)

Genuine Eureka Accessories, Bags, Belts and Filters  
Accessoires, sacs, courroies et filtres Electrolux authentiques

|   | Part No.<br>N° de parte | Qty.<br>Cant. | Price (usd)*<br>Precio (usd)* | Total<br>Total |
|---|-------------------------|---------------|-------------------------------|----------------|
|  | 52320B                  |               | \$2.99                        |                |
| F&G BAG (3 per pack)<br>BOLSA F&G (3 por paquete)                                   |                         |               |                               |                |
|  | 57695B                  |               | \$5.99                        |                |
| PREMIUM F&G BAG (3 per pack)<br>BOLSA F&G DE PRIMERA CALIDAD (3 por paquete)        |                         |               |                               |                |
|  | 53977-33                |               | \$21.99                       |                |
| OUTER BAG<br>BOLSA EXTERNA  |                         |               |                               |                |
|  | 52100C                  |               | \$2.99                        |                |
| BELT STYLE RD (package of 2)<br>CORREA RD (2 por Paquete)                           |                         |               |                               |                |
|  | 14070-3                 |               | \$4.99                        |                |
| EXTENSION WAND<br>TUBO VARILLA DE EXTENSIÓN   |                         |               |                               |                |
|  | 54505-3                 |               | \$5.99                        |                |
| DUSTING BRUSH<br>CEPILLO PARA POLVO   |                         |               |                               |                |

1 of / de 2

Genuine Eureka Accessories, Bags, Belts and Filters  
Accessoires, sacs, courroies et filtres Electrolux authentiques

Part No.  
N° de pièce

Qty.  
Qté.

Price (CAD)\*  
Prix (CAD)\*

Total



UPHOLSTERY NOZZLE  
BROSSE POUR MEUBLES REMBOURRÉS

53454-7

\*

see p. 1  
voir p. 1



CREVICE TOOL  
OUTIL DE COIN

27237-3

\*

see p. 1  
voir p. 1



FLOOR BRUSH  
BROSSE POUR PLANCHERS

54309-7

\*

see p. 1  
voir p. 1



TOOL SET, HOSE ASSY. & 4 TOOLS  
ENSEMBLE BOYAU ET OUTILS DE 4

60F

\*

see p. 1  
voir p. 1



BRUSHROLL  
ROULEAU-BROSSEUR

54104-1

\*

see p. 1  
voir p. 1



END CAP COVER  
LE COUVERCLE À EXTRÉMITÉ

26059A

\*

see p. 1  
voir p. 1



ATTACHMENT CLIP  
PORTE-OUTILS

54610

\*

see p. 1  
voir p. 1

TOTAL: \*prices subject to change without notice  
TOTAL: \*prix sujets à des modifications sans avertissement

TAX: (add state tax and local taxes as required by law)  
TAXE: (ajouter les taxes de l'état et les taxes locales comme cela est exigé par la loi)

POSTAGE AND HANDLING CHARGE / FRAIS DE MANUTENTION ET D'ENVOIS

TOTAL ENCLOSED (A + B + C = D) / TOTAL CH-JOINT (A + B + C = D)

④

③

②

①

**eureka!**  
For orders in Canada  
Pour les commandes  
au Canada

**IMPORTANT / IMPORTANT**

MODEL NUMBER / NUMÉRO DE MODÈLE  
SERIAL NUMBER / NUMÉRO DE SÉRIE

Be sure to include your model, type and serial numbers.  
These numbers may be found on the rating plate.  
Veuillez à joindre vos numéros de modèle, type et série.  
Ces numéros figurent sur la plaque du constructeur.

**By Mail: / Par Courier:**

Simply fill out this Order Form. Please be sure to include your phone number.  
Remplissez simplement ce bon de commande.  
Veuillez à joindre votre numéro de téléphone

**SHIP TO: / EXPÉDIEZ À:**

Name / Nom

City / Ville

State / État

Zip Code / Code Postal

Telephone (Very Important) / Téléphone (Très Important)

**PAYMENT: / PAIEMENT:**

(no C.O.D. checks) (pass de livraison contre remboursement)  
☐ Check or money order, DO not send currency.  
☐ VISA ☐ MC ☐ AMEX

ACCT. NUMBER / NUMÉRO DE COMPTE  
EXPIRATION DATE  
DATE D'EXPIRATION

SIGNATURE (full name as shown on acct.)  
SIGNATURE (nom complet tel qu'il apparaît sur le compte)

**PAYABLE TO: / À L'ORDRE DE:**  
Electrolux Home Care Products Canada  
5855 Terry Fox Way  
Mississauga, Ontario L5V 3E4